

The advantages are crystal clear.



Perlite Filter Media for Swimming Pools

AquaPerl™ is a new, lightweight filter media for swimming pools. It is engineered for use in diatomaceous earth (D.E.) filters and can be used as a direct “scoop for scoop” replacement for D.E.

Improves filter operation –

AquaPerl™ filter media pre-coats better, faster and more effectively than other filter aids.

Saves time –


AquaPerl™ filter media backwashes faster and more completely, resulting in less time spent on filter cleaning and maintenance.

Safe to use –

AquaPerl™ filter media is all-natural, nontoxic and chemically inert.

Easy to handle –

AquaPerl™ filter media is half the weight of traditional D.E. filter aids, making it easier to lift and carry.

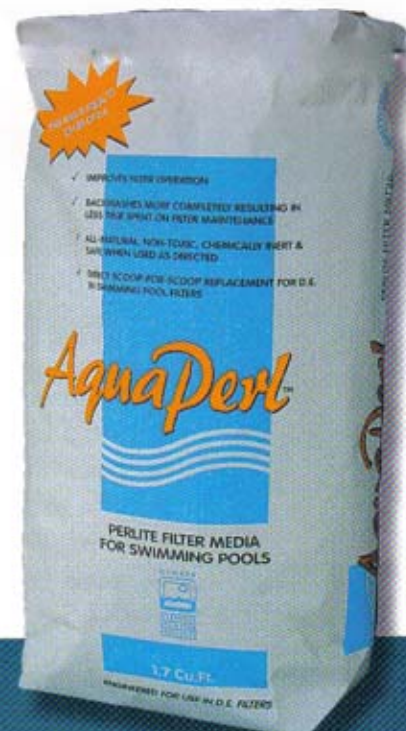

1-800-342-8667



Directions for Use

AquaPerl™ is Easy to Use!

Use AquaPerl™ the same as you would use D.E.—

If you used 5 scoops of D.E. in your filter before, use 5 scoops of AquaPerl™ now. It's that easy!


If you currently use...



(1 scoop)
1-lb. of D.E.

=

You now use...

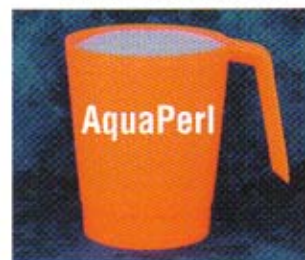

(1 scoop)
1/2-lb. of AquaPerl™

Step 1: Clean the Filter

Clean the filter thoroughly per the manufacturer's recommendations and normal maintenance procedures.

Step 2: Determine the Size of the Filter

Determine the square feet of filter area for your D.E. filter. (This information usually appears on the outside of the filter housing.)

Step 3: Determine the Proper Amount of AquaPerl™ to Use

Using the chart below, determine the amount of AquaPerl™ filter media needed to properly precoat your filter.

Step 4: Precoat the Filter

Add the appropriate amount of AquaPerl™ to the pool filter using a slurry of AquaPerl™ and water. Mix 1/2 the required amount of AquaPerl™ thoroughly in a pail of water. Pour this mixture into the skimmer with the circulation system running. Repeat the process once more using the remaining amount of AquaPerl™ and water.

Suggested Usage Chart

Square Feet of Filter Area	Recommended Scoops* of AquaPerl ¹	Recommended lbs. of AquaPerl ²
20 ft. - 29 ft.	3	1.5
30 ft. - 39 ft.	4	2
40 ft. - 49 ft.	5	2.5
50 ft. - 59 ft.	6	3
60 ft. - 69 ft.	7	3.5
70 ft. - 79 ft.	8	4
80 ft. - 89 ft.	9	4.5

¹ For ease in measuring volume, use AquaPerl™ the same as you would D.E. If you used 5 scoops of D.E. before, use 5 scoops of AquaPerl™ now.

Note: A scoop* is defined as a standard 1-lb D.E. scoop. A standard 1-lb. D.E. scoop holds approximately 1/2-lb. of AquaPerl™.

² For ease in measuring weight, 1-lb. of AquaPerl™ is equal to approximately 3 full quarts.